
YERASOV. YERASOV.


FOR NOTES

PACKAGE CONTENTS

ļ	sog,	r Manual	อรเ
, pcs	CH-10	get pedal	ļing

9

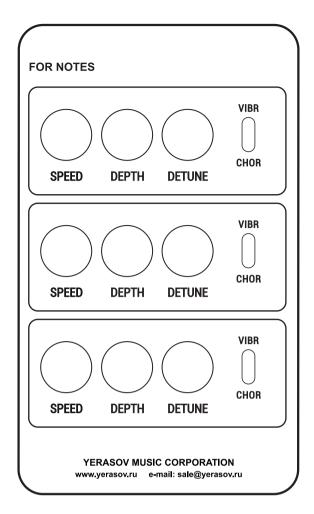

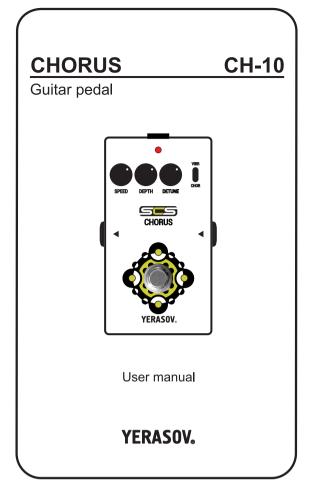

YERASOV. YERASOV.

SAFETY MEASURES

- · Keep away from high humidity.
- After exposure to cold, keep the device at room temperature for at least 30 minutes before switching on.
 - Avoid dropping, keep away from dirt and water.

OVERVIEW

CH-10 is a classic chorus effect with adjustable **SPEED**, **DEPTH** and **DETUNE** parameters as well as a true bypass mode. The **VIBR / CHOR** switch enables easy selection between vibrato and chorus effects.

PANEL DESCRIPTION



- 1- Output Jack
- 2-SPEED effect modulation control
- 3 DEPTH depth regulator
- 4 DC adapter input
- 5-On/OffLED indicator
- 6 DETUNE intensity of 'detune' effect
- 7 VIBR / CHOR toggle switch between vibrato and chorus effects
- 8 Input Jack
- 9-On/Offswitch

CONNECTION POLARITY OF DC ADAPTER



1

YERASOV.

APPLICATION

The pedal is powered by either a 6F-22 battery or a 9V DC adapter. We recommend using YERASOV AD9-100 or AD9-400 adapters. For extended battery life unplug the guitar cable when device is not being used.

- 1. Install battery or plug the adapter in.
- 2. Connect the pedal as shown in the illustration.
- 3. Turn the guitar volume knob to the maximum level for best results.
- 4. The LED light indicates that the pedal is turned on.
- 5. Start with all the controls set to the middle position.

YERASOV.

2

SCS PEDAL BOARD


YERASOV **CH-10** is compatible with SCS Pedal Board. The SCS connector is at the bottom of the pedal, the cable is included in the SCS Pedal Board package. Fore more information please visit www.yerasov.ru

BATTERY REPLACEMENT

Access the battery compartment by unscrewing the bottom cover. Always put the cover back after replacing the battery.

SPECIFICATIONS

Input impedance, kOhm	470
Power supply (battery / DC), V	9
Current Draw, mA	
Dimensions, mm	112 x 62 x 50
Weight, kg	0.25
5 , 5	

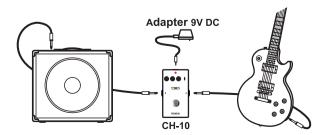

3