 
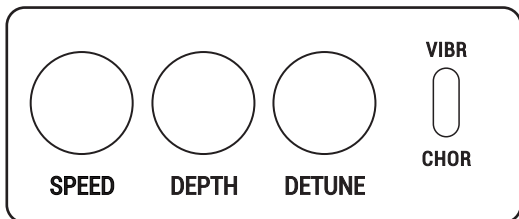 
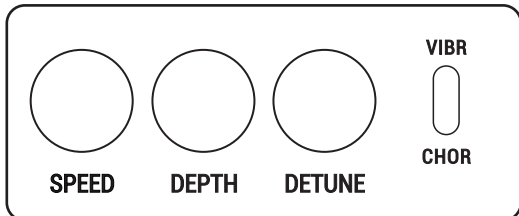 



FOR NOTES

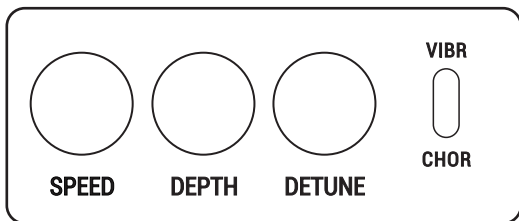

YERASOV MUSIC CORPORATION  
 www.yerasov.ru e-mail: sale@yerasov.ru

# BASS CHORUS CH-10B

 Guitar pedal

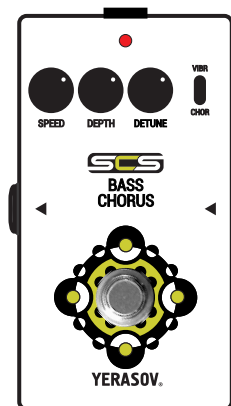

User manual

## YERASOV.

Guitar pedal CHB-10, pcs.....1  
 User Manual, pcs.....1  
 Packagings packing, pcs.....1

### PACKAGE CONTENTS

Input impedance, kOhm .....470  
 Power supply (battery or power adapter), V.....9  
 Current Draw, mA.....10  
 Dimensions, mm.....112x62x50  
 Weight, kg.....0,25

### SPECIFICATIONS

## PRECAUTIONS

- Avoid storing or operating the unit in humid conditions (not above 80%).
- After storage or transportation at a low temperature before turning on unit shall be stored at room temperature for at least 2 hours.
- Protect the device from falls, bumps, to get into foreign objects, liquids, dirt and rain.

## GENERAL INFORMATION

Pedal BASS CHORUS CH-10B can get uncanny effect for bass guitar, which makes the sound of the instrument voluminous and rich. Rotation **SPEED** regulators and **DEPTH**, you can choose the desired sound, and the depth of “detuning” tool can be changed using the slider **DETUNE**.

Switch **VIBR/CHOR** allows you to disable the channel of the direct signal and get the effect of frequency vibrato. The pedal is applied high-quality foot switch ALPHA real TRUE BYPASS.


1

## USE OF PRODUCT

The power of guitar pedals CH-10B from an external source of stabilized voltage 9V or battery type 6F-22, which is installed under the bottom cover of the pedal. In order to avoid the background, use only adapters AD9-100 or AD9-400 firms YERASOV.

Turn on the power from the battery when joining plug type Jack (mono) input Jack, so for extended battery life, do not leave the Jack in the input connector, if you are not using the device.

- Connect the AC adapter to the Jack or the mouth-the battery.
- Connect the pedal according to the picture.
- Turn on the power.
- When you turn on the pedal led indicator illuminates.
- Select all controls to the middle position.
- To use the pedals with effect chorus click **CHOR**.

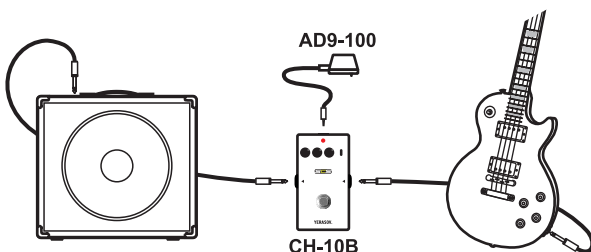


3

## PANEL DESCRIPTION



 - 1- output Jack
- 2- **SPEED** - speed controller audio modulation
- 3- **DEPTH** - depth regulator effect
- 4- Jack for DC adapter
- 5- on LED effect
- 6- **DETUNE** - depth regulator “detuning”
- 7- **VIBR / CHOR** - mode switch vibrato and chorus
- 8- input Jack
- 9- on / off button effect

## CONNECTION POLARITY OF DC ADAPTER



2

- To use the pedals with the effect of vibrato, set the switch to **VIBR**.
- The rotation of the regulators to obtain the required You sound.

## USE THE PEDAL WITH SCS PEDAL BOARD

The pedal is compatible with SCS Pedal Board. Connector for SCS is located on the bottom cover of the pedal body. Connect the pedal to the Pedal Board is a special cable that comes with the SCS Pedal Board. For more detailed instructions, please visit to site [www.yerasov.ru](http://www.yerasov.ru).

## REPLACEMENT BATTERY

The battery compartment is located underneath the pedal cover. To replace the battery, remove the cover by unscrewing the 4 screws. Replace the battery and replace the cover.

4