

YERASOV. YERASOV.

PACKAGE CONTENTS FOR NOTES

ı	L	er iviariuai, pcs	21
	0 , pcs		
•	,	JO MICH Toleran markin	٠,

9

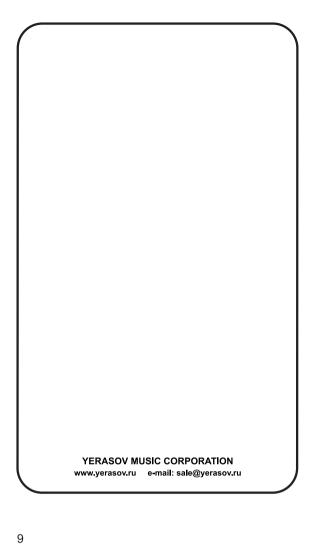

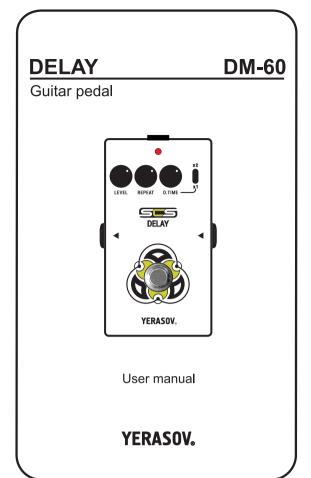

SAFETY MEASURES

- · Keep away from high humidity.
- After exposure to cold, keep the device at room temperature for at least 30 minutes before switching on.
 - Avoid dropping, keep away from dirt and water.

OVERVIEW

DM-60 is a versatile digital delay effect with a wide spectrum that ranges from spring reverb imitation to whole phrase repetition. Built with the best components today this pedal ensures durability and high quality.

PANEL DESCRIPTION



- 1 Output Jack
- 2 LEVEL- delay level
- 3 **REPEAT** decay level (determines the number of repetitions)
- 4 DC adapter input
- 5 On / Off LED indicator
- 6 **D. TIME** delay length (sets the interval between repetitions)
- 7 Delay range toggle switch
- 8 Input Jack
- 9 On / Off switch

CONNECTION POLARITY OF DC ADAPTER



2

YERASOV.

1

APPLICATION

The pedal is powered by either a 6F-22 battery or a 9V DC adapter. We recommend using YERASOV AD9-100 or AD9-400 adapters. For extended battery life unplug the guitar cable when device is not being used.

- 1. Install battery or plug the adapter in.
- 2. Connect the pedal as shown in the illustration.
- 3. Turn the guitar volume knob to the maximum level for best results.
- 4. The LED light indicates that the pedal is turned on.

YERASOV.

SCS PEDAL BOARD


YERASOV **DM-60** is compatible with SCS Pedal Board. The SCS connector is at the bottom of the pedal, the cable is included in the SCS Pedal Board package. Fore more information please visit www.yerasov.ru

BATTERY REPLACEMENT

Access the battery compartment by unscrewing the bottom cover. Always put the cover back after replacing the battery.

SPECIFICATIONS

Input impedance, кOhm	470
Delay time range (toggle switch), ms	
x1	20 - 320
x2	
Power supply (battery /DC), V	9
Current Draw, mA	
Dimensions, mm	
Weight, kg	
	•

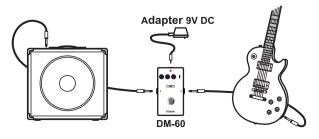

3