YERASOV. YERASOV.

FOR NOTES

PACKAGE CONTENTS

G

| ļ | Packagings packing, pcs |
|---|-------------------------|
| t | User Manual, pcs |
| ļ | Guitar pedal FZ-10, pcs |

TONE

BOOZE

GAIN

FUZZ

LEVEL

GAIN

BOOZE

FUZZ

GAIN

BOOZE

TONE


B. BOOST

YERASOV MUSIC CORPORATION

www.yerasov.ru

e-mail: sale@yerasov.ru

FOR NOTES

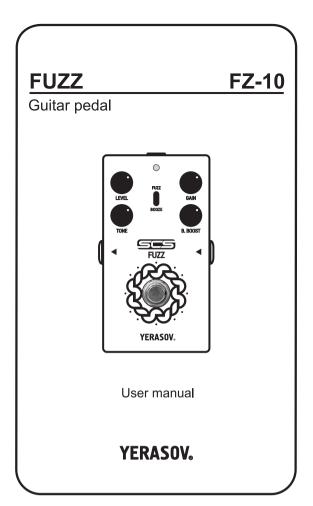

PRECAUTIONS

- Avoid storing or operating the unit in humid conditions (not above 80%).
- After storage or transportation at a low temperature before turning on unit shall be stored at room temperature for at least 2 hours.
- Protect the device from falls, bumps, to get into foreign objects, liquids, dirt and rain.


GENERAL INFORMATION

FZ-10 is a versatile fuzz effect. We've combined two types of fuzz in one pedal. Which means you're getting both modern fat stoner/sludge sound and vintage full of harmonics rock/blues tone.

FZ-10 works perfectly with guitar and bass. It keeps singing at any gain level preserving all dynamics and individual character of your instrument.

The pedal is applied high-quality foot switch ALPHA real TRUE BYPASS

PANEL DESCRIPTION

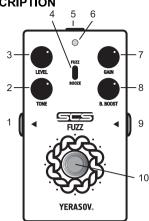

- 1 Output Jack
- 2 TONE tone control
- 3 LEVEL volume control
- 4 FUZZ/BOOZE fuzz type switch
- 5 DC adapter input
- 6 On / Off LED indicator
- 7 GAIN gain control
- 8 B.BOOST low boost switch
- 9 Input Jack
- 10 On / Off switch

CONNECTION POLARITY OF DC ADAPTER



2

YERASOV.


1

YERASOV.

APPLICATION

The pedal is powered by either a 6F-22 battery or a 9V DC adapter. We recommend using YERASOV AD9-100 or AD9-400 adapters. For extended battery life unplug the guitar cable when device is not being used.

- Install battery or plug the adapter in.
- Connect the pedal as shown in the illustration.
- Set LEVEL and TONE knobs to 12 o'clock and turn GAIN knob all the way counterclockwise. The FUZZ/BOOZE switch lets you choose between full of mids modern tone (FUZZ) and warm vintage tone (BOOZE). Caution! There is a significant volume gap between FUZZ and BOOZE modes! You may want to figure out convenient volume levels for both modes first and then use FOR NOTES section of this manual to write those settings down.
- Use **B.BOOST** knob to boost the low end and get the authentic classic tone in **BOOZE** mode. **B.BOOST** can effectively thicken up your sound. It works in **FUZZ** mode too!

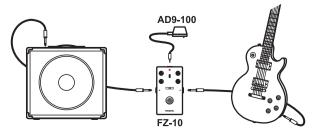

• Power up the pedal and turn on your amplifier. Once the effect is engaged, the red LED lights up. Set your instrument's volume to its maximum position anduse **LEVEL** knob to eliminate volume difference when the effect is engaged. Finally, tweak other knobs to find the desired tone.

SCS PEDAL BOARD

YERASOV **FZ-10** is compatible with SCS Pedal Board. The SCS connector is at the bottom of the pedal, the cable is included in the SCS Pedal Board package. Fore more information please visit www.yerasov.ru

BATTERY REPLACEMENT

Access the battery compartment by unscrewing the bottom cover. Always put the cover back after replacing the battery.

SPECIFICATIONS

| Input impedance, МОм | |
|--|-----------|
| Power supply (battery or power adapter), V | |
| Current Draw, mA | |
| Dimensions, mm: | 112x62x50 |
| Weight, kg | 0,25 |

3