



AI002

BEIGE BUG

BB-1

Guitar pedal

BOOSTER



User manual

YERASOV.

PRECAUTIONS

 
- Avoid storing or operating the unit in humid conditions (not above 80%).
- After storage or transportation at a low temperature before turning on unit shall be stored at room temperature for at least 2 hours.
- Protect the device from falls, bumps, to get into foreign objects, liquids, dirt and rain.

GENERAL INFORMATION

BB-1 is a booster effect with adjustable gain up to 30dB. With its help you can as a "warm up" your tube amp, and use it as an independent effect, which retains all the characteristics of natural warm overdrive. When used pedal as a booster, the sustain increases, almost without changing the character of the sound of your amp.

The pedal is collected on the most modern components: low-noise chip, precision resistors, electrolytic capacitors with low leakage currents. In the audio path only used film capacitors WIMA. In the pedal is applied 3DPDT foot switch from ALPHA for the TRUE BYPASS.

PANEL DESCRIPTION

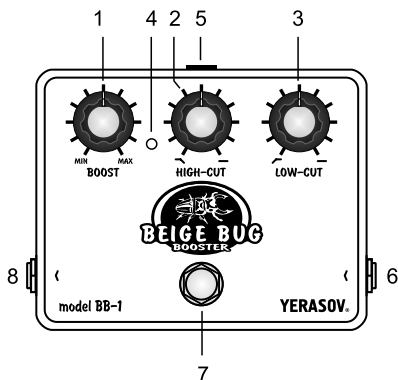

- 1 - **BOOST** - boost control knob
- 2 - **HIGH-CUT**- treble cut knob
- 3 - **LOW-CUT** - low cut knob
- 4 - on LED effect
- 5 - Jack for DC adapter
- 6 - Input Jack
- 7 - on / off button effect
- 8 - output Jack

Polarity of DC 9V adapter



USE OF PRODUCT

Power supply of pedals BB-1 from the battery type 6F-22, which is installed under the bottom cover of the pedal, or from an external source of stabilized voltage 9V.

Turn on the power from the battery, when connecting the Jack (mono only) to the input Jack, so to prolong the battery life, do not leave Jack in the input connector.

Connect the DC adapter jack (5) or the battery.

 
Connect the pedal as shown.

Turn on the amplifier.

Set the knob **BOOST** to the minimum position, knobs **HIGH-CUT** and **LOW-CUT** in the maximum position. This provides a linear frequency response.

Turn on the amplifier and pedal. When you turn the pedal LED lights up.

Rotate the knobs adjust the sound you need.

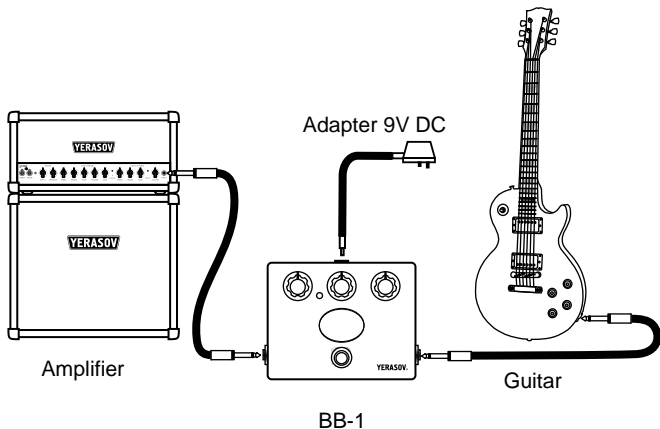

REPLACEMENT BATTERY

- Use only the adapter AD9-100 or AD9-500 by YERASOV®.
- To prolong battery life, do not leave Jack in the input connector.
- To replace the battery, remove the cover by unscrewing the 4 screws. Replace the battery cover and set in place.

SPECIFICATIONS

| | |
|---|-----------|
| Input impedance, MOhm..... | 1 |
| Power Supply, V..... | 9 |
| Current Draw, mA..... | 12 |
| The level of gain (Boost) dB, max | 30 |
| Dimensions, mm:..... | 126 54 94 |
| Weight, kg..... | 0,35 |

PACKAGE CONTENTS

| | |
|-----------------------------|---|
| Guitar pedal BB-1, pcs..... | 1 |
| User Manual, pcs..... | 1 |

YERASOV MUSIC CORPORATION
www.yerasov.ru e-mail: sale@yerasov.ru