



A1002

BROWN CREATURE BC-1

Guitar pedal

DISTORTION



User manual

YERASOV.

PRECAUTIONS


- Avoid storing or operating the unit in humid conditions (not above 80%).
- After storage or transportation at a low temperature before turning on unit shall be stored at room temperature for at least 2 hours.
- Protect the device from falls, bumps, to get into foreign objects, liquids, dirt and rain.

GENERAL INFORMATION

BC-1 is a distortion effect. Dense and powerful sound of the pedal is perfect for a variety of music styles, especially for extreme areas. The pedal is equipped with three-band equalizer.

The pedal is collected on the most modern components: high-precision resistors, electrolytic capacitors with low leakage currents. In the audio path only used film capacitors WIMA. In the pedal is applied 3DPDT foot switch from ALPHA for the TRUE BYPASS.

PANEL DESCRIPTION

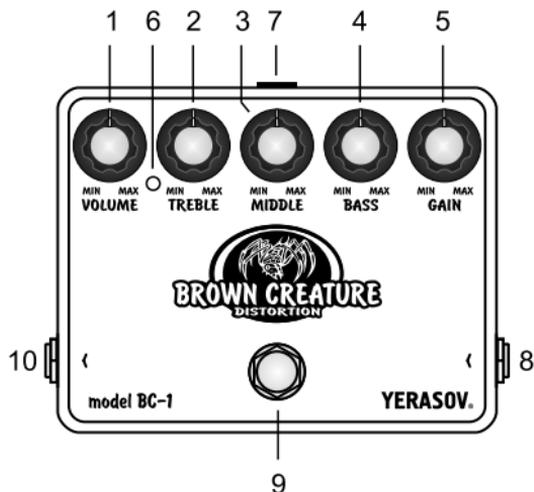

- 1 - **VOLUME** - volume control knob
- 2 - **TREBLE** - treble control knob
- 3 - **MIDDLE** - middle control knob
- 4 - **BASS** - bass control knob
- 5 - **GAIN** - effect control knob
- 6 - on LED effect
- 7 - Jack for DC adapter
- 8 - Input Jack
- 9 - on / off button effect
- 10 - output Jack

Polarity of DC 9V adapter



USE OF PRODUCT

Power supply of pedals BC-1 from the battery type 6F-22, which is installed under the bottom cover of the pedal, or from an external source of stabilized voltage 9V.

Turn on the power from the battery, when connecting the Jack (mono only) to the input Jack, so to prolong the battery life, do not leave Jack in the input connector.


Connect the DC adapter Jack (5) or the battery.

Connect the pedal as shown.

Turn on the amplifier.

Set the knobs **BASS, MIDDLE, TREBLE** and **GAIN** controls to the middle position, the **VOLUME** pedal eliminate the difference in volume when turned on and off mode. Rotate the knobs adjust the sound you need.

Attention! Because of the particular circuitry during installation of the three regulators **BASS, MIDDLE, TREBLE** and **GAIN** control to position zero, the sound output will not pedal.

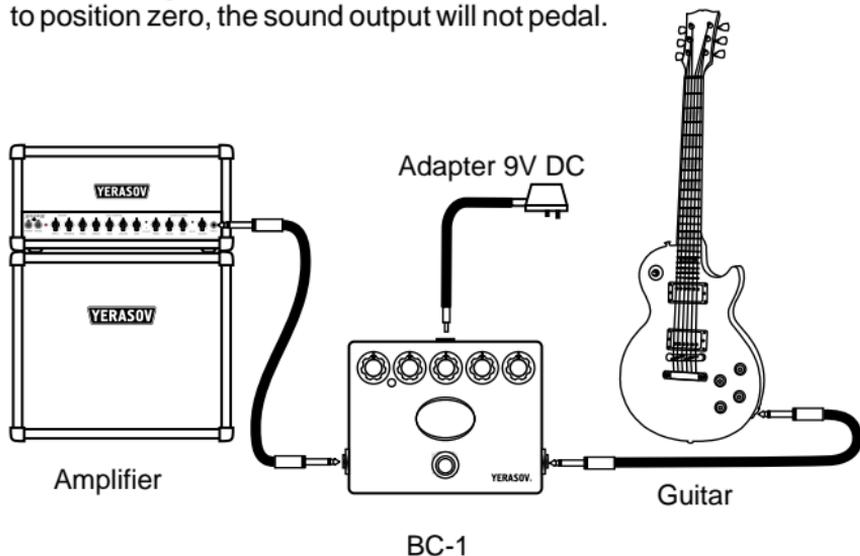

REPLACEMENT BATTERY

- Use only the adapter AD9-100 or AD9-500 by YERASOV®.
- To prolong battery life, do not leave Jack in the input connector.
- To replace the battery, remove the cover by unscrewing the 4 screws. Replace the battery cover and set in place.

SPECIFICATIONS

Input impedance, MOhm.....	1
Power Supply, V.....	9
Current Draw, mA.....	6,5
Dimensions, mm:.....	126 54 94
Weight, kg.....	0,36

PACKAGE CONTENTS

Guitar pedal BC-1, pcs.....	1
User Manual, pcs.....	1

YERASOV MUSIC CORPORATION
www.yerasov.ru e-mail: sale@yerasov.ru